

Pig Pen

Operating and Care Instructions (01.01.25)

TO ENSURE A SAFE OPERATING PROCESS THE STOP PLATE MUST BE USED

DO NOT USE WITH BRUSH OR BRISTLE PIGS

1. Before using the Pig Pen, inspect the pig catcher for any rips, tears, broken cables, etc. If any of these are present, replace or inquire with Cumberland Products about repairs.



2. Select the correct size safety collar for the PE pipe diameter that is going to be pigged.

SIZES CURRENTLY AVAILABLE

- 2" Collar
- 4" Collar
- 6" Collar
- 1-1/4" Collar (add-on option)
- 3" Collar (add-on option)



3. Begin installing the Pig Pen by sliding the selected safety collar around the pipe.



- 4. Slide the Pig Pen over the pipe until it reaches the stop plate.
 - 4a. Use the tabs located on the stop plate and secure it to the mouth of the pipe.
 - 4b. Continue pulling until the bungees are stretched tightly beyond the indicated red line and the cable to the safety collar is fully extended.





Make sure the tabs are aligned properly with the mouth of the pipe and the straps are pulled tight. This will keep the stop plate engaged and the pipe opening covered.

DO NOT REMOVE THE TABS

4 outer / 1 middle

- 5. Pigging process may begin. When in operation, NEVER stand directly out from the pipe opening and stay back 10' in all other directions.
 - *Operator should NEVER allow pressure to exceed 125 PSI
- 6. After pigging is complete, remove air source and account for ALL pigs before removing Pig Pen.
- 7. Remove Pig Pen and spray down with water, if dirty. Let air dry completely before storing in a safe place.
- 8. Check pipe for damage where safety collar was positioned. If pipe was compromised, remove damaged section.

Additional questions? Call Cumberland Products/EEP at 877-493-7322.